2 5/16"

align with the top edge of your door

2 5/16"

Rubbermaid

hidden RECYCLER

Assembly and Installation Instructions

align with the hinge side edge of door

1 Identify the parts

Over-the-Door Hooks

Lid with Bracket

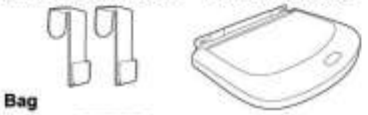

Bag

Frame with Handle

2 Attach the bag to the frame with handle

- Identify the front of the bag: the side with the large flap across the top is the front
- Identify the front of the frame: the narrow side is the front
- Take the front of the frame and slide it underneath the flaps of the bag
- Slide the four tabs on the frame through the slits in the corresponding flaps on the bag and pull the bag down tight

3 Install the Hidden Recycler to the inside of your cabinet door 2 optional ways:

Option 1

Attach the bag to the cabinet door using the over-the-door hooks provided.

- Lay the lid with bracket down and insert the two hooks into the slots on the bracket, pressing firmly until they stop
- Place the hooks over cabinet door and hang the lid with bracket on the inside of the cabinet door

Option 2

Attach the bag to the cabinet door using appropriate screws (screws are not included).

- Provide your own pencil and your choice of screws. Wood screws are recommended. **Warning! Ensure that the correct screws are selected based on the thickness of your cabinet door. Do not use screws that are longer than the thickness of the door!**
- Hold the template instruction sheet to the inside of the cabinet door
- Using this sheet as a template, poke holes through the paper with a pencil where the "Xs" are and make marks on the inside of the cabinet door. This is where you will screw lid with bracket to the door.

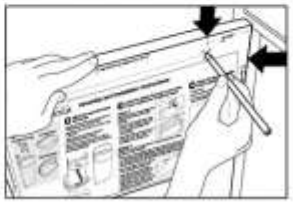

4 Attach the bag on the inside of your cabinet door

- Lift the lid up
- Hook the frame onto the bracket
- To remove the bag, lift the handle and remove from the bracket

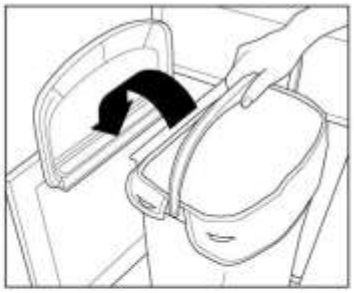

align with the hinge side edge of door

LA1799571